 
 
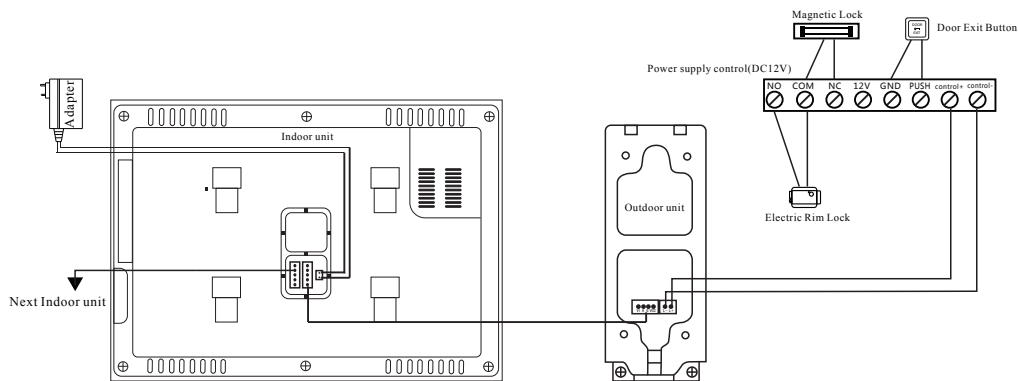 


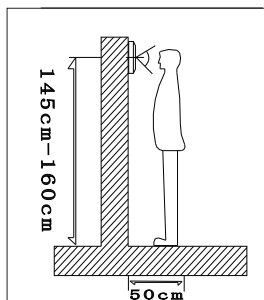


5.Installation

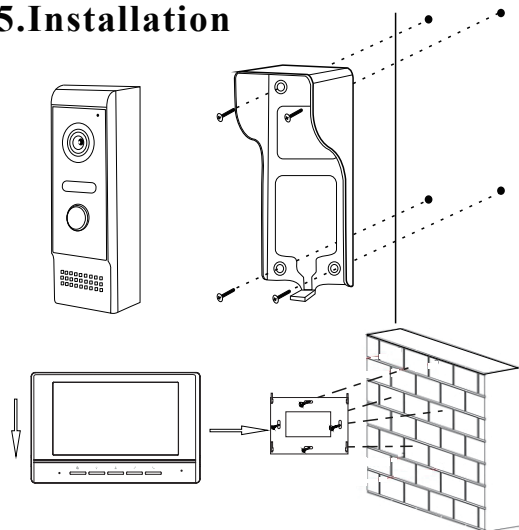

Indoor unit Standard installation height is 145cm~160cm
(distance between screen centre and the floor)






Outdoor unit Standard installation height is 145cm~160cm
(distance between camera and the floor)

 Video Door Phone For Villa

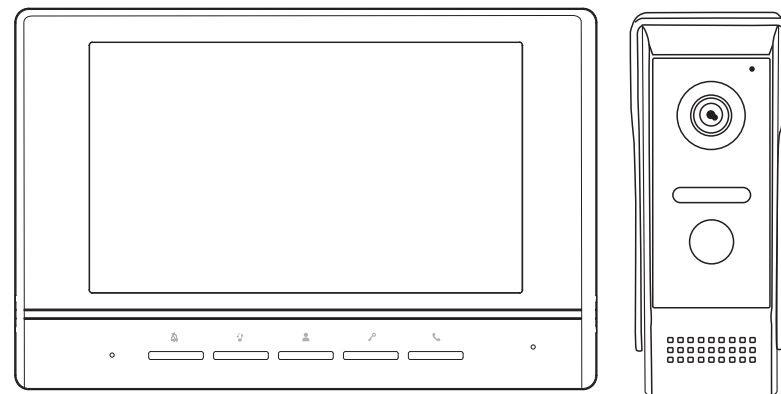


6.Parameters

Indoor unit		Outdoor unit	
Power Supply	Input:AC100-240V Output:DC15V 1500mA	Power Supply	Receive power from monitor
Power	Standby:≤1W Working:≤10W	Power	Standby:≤0W Working:≤2W
Screen	7" TFT Liquid Crystal Display	Camera	30W
Wiring	4 OR 5 PIN Line RVV	Night Version	WLED,Super backlight compensation
Video Signal	1VP-P	Working Temperature	-30℃ - +60℃
Timing	Intercom:30 seconds Monitoring:90 seconds		
Ringtone	36 chord		
Working Temperature	-20℃ - +60℃		

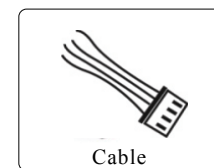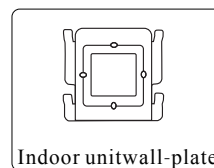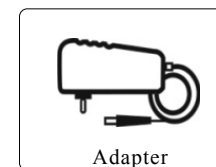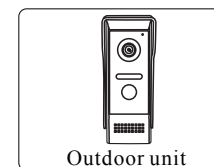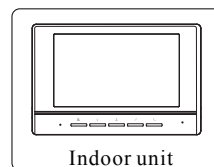     


Please read all of these instruction before installation

 1.Indoor unit

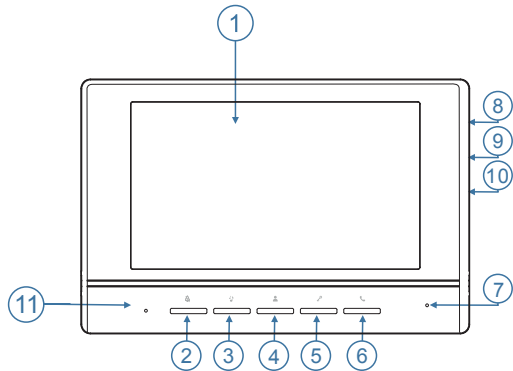


 - ①.TFT-LCD display screen
- ②.Ring cancel
- ③.Ring tone & Ring volume adjustment
- ④.Monitor button
- ⑤.Unlock button
- ⑥.Intercom or call button
- ⑦.Microphone

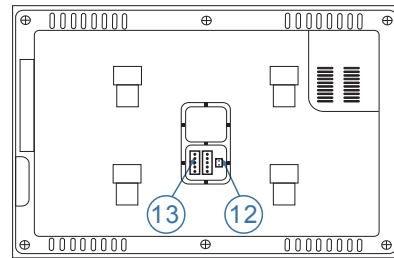


- ⑧.Screen color adjustment
- ⑨.Screen brightness adjustment
- ⑩.Intercom volume adjustment
- ⑪.Power LED
- ⑫.DC15V Adaptor sockets
- ⑬.Sockets for outdoor unit connection
(The same function for two sockets)

 2.Outdoor unit

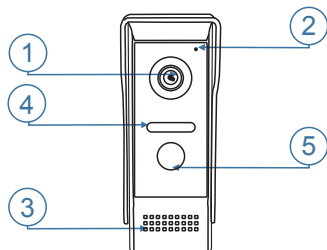

 - ①.Camera
- ②.MIC
- ③.Speaker
- ④.LED
- ⑤.Call button

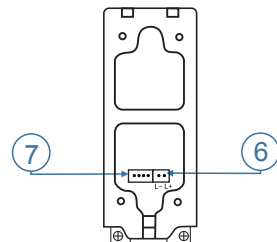

- ⑥. "L+L-" Sockets for lock
- ⑦.4P Sockets for indoor unit

3.Operating Instructions

Functions of indoor unit

A.Indoor unit ringtone setting

1.Mute setting

In the standby mode of the indoor unit, press the button "👤" first to turn on the screen, and then press the button "🔕" to turn off the bell and intercom, making no effects on image display. If it is required to turn on the bell and intercom, press the button "👤" again in the monitor "🔕" mode.

● **Disturbance-free mode will be activated after the mute function is enabled**

2.Change ringtone

In the standby mode of the indoor unit, press the button "👤" first to turn on the screen, and then press the button "🎵" to activate the ringtone and enter "change ringtone" settings. The system is equipped with 25 ringtones of various lengths. The button "🎵" is pressed once to change one ringtone. After a suitable ringtone is selected, stop pressing the button. The last ringtone will be the ringtone when the system is called by anyone.

3.Ringtone volume adjustment

In the standby mode of the indoor unit, press the button "👤" first to turn on the screen, and then press the button "🎵" to activate the ringtone and enter "ringtone volume" settings. It has three levels, large, medium and small. Press the button "🎵" for two seconds each time to increase or decrease the volume progressively.

● **After power-off, all ringtone settings will be restored to factory settings**
B. Instructions for doorbell operation

1. When any visitor presses the call button on the outdoor unit, the indoor unit screen will display the outdoor image in real time and the bell will ring.

2. The indoor user may press the button "🗨️" to talk with the visitor.

Note: Talking will be enabled by pressing the button "🗨️" for the first time, and it will be disabled if the button is pressed again. The screen will be off automatically in 30 seconds if the calling is not answered.

3. In the intercom mode, the indoor user may press the button "🔓" to open the door.

4. In the intercom mode, the indoor user may press the button "🗨️" to finish talking or talking will finish automatically in 90 seconds.

5.If it is required to resume talking after hang-up, press the button "👤" first and then the button "🗨️" to talk with the visitor.

6.In the standby mode of the indoor unit, press the button "👤" first and then the button "👤" to unlock the door; the screen will be off automatically in 90 seconds or it can be powered off by pressing the button "🔓" once.

7. Intercom between indoor unit and indoor unit: when an outdoor unit is connected in series with multiple indoor units, press the "🗨️" key to call other indoor units in standby mode. The called indoor unit presses the "🗨️" key for the first time to answer the intercom, and press the "🗨️" key for the second time to hang up to end the call. (the indoor units can communicate with each other, and the indoor units must be connected with 5-core wire)

4.Connection of the video doorphone

